

JEEP_V11.10 Diag Function List (Note: For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Make	Year	Model
JEEP	2017	Cherokee
JEEP	2017	Compass - Brazil
JEEP	2017	Compass - China
JEEP	2017	Compass - Other
JEEP	2017	Compass/Patriot
JEEP	2017	Grand Cherokee
JEEP	2017	Renegade
JEEP	2017	Wrangler
JEEP	2017	Wrangler (Export)
JEEP	2016	Cherokee
JEEP	2016	Compass/Patriot
JEEP	2016	Grand Cherokee
JEEP	2016	Renegade
JEEP	2016	Wrangler
JEEP	2016	Wrangler (Export)
JEEP	2015	Cherokee
JEEP	2015	Compass/Patriot
JEEP	2015	Grand Cherokee
JEEP	2015	Liberty
JEEP	2015	Renegade
JEEP	2015	Wrangler
JEEP	2015	Wrangler (Export)
JEEP	2014	Cherokee
JEEP	2014	Compass/Patriot
JEEP	2014	Grand Cherokee
JEEP	2014	Liberty
JEEP	2014	Wrangler
JEEP	2014	Wrangler (Export)
JEEP	2013	Compass/Patriot
JEEP	2013	Grand Cherokee
JEEP	2013	Liberty
JEEP	2013	Wrangler
JEEP	2013	Wrangler (Export)
JEEP	2012	Compass/Patriot
JEEP	2012	Grand Cherokee
JEEP	2012	Liberty
JEEP	2012	Wrangler
JEEP	2012	Wrangler (Export)
JEEP	2011	Compass/Patriot
JEEP	2011	Grand Cherokee
JEEP	2011	Liberty
JEEP	2011	Wrangler
JEEP	2011	Wrangler (Export)

JEEP	2010	Commander		
JEEP	2010	Compass/Patriot		
JEEP	2010	Grand Cherokee		
JEEP	2010	Liberty		
JEEP	2010	Wrangler		
JEEP	2010	Wrangler (Export)		
JEEP	2009	Commander		
JEEP	2009	Compass/Patriot		
JEEP	2009	Grand Cherokee		
JEEP	2009	Liberty		
JEEP	2009	Wrangler		
JEEP	2009	Wrangler (Export)		
JEEP	2008	Commander		
JEEP	2008	Compass/Patriot		
JEEP	2008	Grand Cherokee		
JEEP	2008	Liberty		
JEEP	2008	Wrangler		
JEEP	2008	Wrangler (Export)		
JEEP	2007	Commander		
JEEP	2007	Compass/Patriot		
JEEP	2007	Grand Cherokee		
JEEP	2007	Liberty		
JEEP	2007	Wrangler		
JEEP	2006	Commander		
JEEP	2006	Compass/Patriot		
JEEP	2006	Grand Cherokee		
JEEP	2006	Liberty		
JEEP	2005	Grand Cherokee		
JEEP	2005	Liberty		
JEEP	2005	Wrangler		
JEEP	2004	Grand Cherokee		
JEEP	2004	Liberty		
JEEP	2004	Wrangler		
JEEP	Before 2004	Before 2004		
System	ECU INFO.	Read Code	Clear Code	View Data
PCM (Power Control Module)	●	●	●	●
PCM (Powertrain Control Module) (Type 1)	●	●	●	●
PCM (Powertrain Control Module) (Type 2)	●	●	●	●
RADIO	●	●	●	●
TCM (Transmission Control Module) (Type 1)	●	●	●	●
TCM (Transmission Control Module) (Type 2)	●	●	●	●
TCM (Transmission Control Module)	●	●	●	●
ABS (Antilock Brake Controller)	●	●	●	●
ORC/SRS (Occupant Restraint Controller)	●	●	●	●
BCM (Body Computer Module)	●	●	●	●
CCN/INSTR (Cabin Compartment Node/Instrument Cluster)	●	●	●	●
WCM (Wireless Control Module)	●	●	●	●
HVAC (Heat Ventilation And A/C)	●	●	●	●
OCM (Occupant Classification Module)	●	●	●	●
DDM (Drivers Door Module)	●	●	●	●
PDM (Passengers Door Module)	●	●	●	●
PTS (Park Tronics)	●	●	●	●

AMP (Amplifier)	●	●	●	●
ACC (Adaptive Cruise Control)	●	●	●	●
AHBM (Automatic High Beam Module)	●	●	●	●
DMFR (Door Module Front Right)	●	●	●	●
DMRR (Door Module Rear Right)	●	●	●	●
DVD (DVD Player)	●	●	●	●
ESM (Electronic Shifter Module)	●	●	●	●
FDCM (Final Drive Control Module)	●	●	●	●
EOM (Electronic Overhead Module)	●	●	●	●
HFM (Hands Free Module)	●	●	●	●
AHLM (Auto Headlamp Leveling Module)	●	●	●	●
ASBS (Automatic Sway Bar System)	●	●	●	●
AWD (All Wheel Drive)	●	●	●	●
DMFL (Left Forward Door Module)	●	●	●	●
DMRL (Left Rear Door Module)	●	●	●	●
FSM (Folding Seat Module)	●	●	●	●
HIDT (High Intensity Discharge Translator)	●	●	●	●
HSM (Heated Seat Module)	●	●	●	●
SAS (Steering Angle Sensor)	●	●	●	●
ITM (Intrusion Module)	●	●	●	●
LRSM (Light Rain Sensor Module)	●	●	●	●
PLGM (Power Lift Gate Module)	●	●	●	●
PSDML (Power Sliding Door Module (Left))	●	●	●	●
PSDMR (Power Sliding Door Module (Right))	●	●	●	●
PTIM (Police/Taxi Interface Module)	●	●	●	●
SDAR (Satellite Digital Radio)	●	●	●	●
SDARV (Satellite Video Receiver)	●	●	●	●
VES (Vehicle Entertainment System)	●	●	●	●
TM (Trailer)	●	●	●	●
MSMD (Memory Seat Module)	●	●	●	●
SUNR (Sunroof Module)	●	●	●	●
SCM (Steering Column Module)	●	●	●	●
VES3 (Last Row Screen)	●	●	●	●
TPMS (Tire Pressure Monitoring Systems)	●	●	●	●
PTCM (Power Top Control Module)	●	●	●	●
PEM (Passive Entry Module)	●	●	●	●
VES2 (Second Row Screen)	●	●	●	●
SCCM (Steering Column Control Module)	●	●	●	●
IPC (Instrument Panel Cluster)	●	●	●	●
RFH (Radio Frequency Hub)	●	●	●	●
EPS (Electric Power Steering)	●	●	●	●
ICS (Integrated Center Stack)	●	●	●	●
BSM (Blind Spot Module)	●	●	●	●
TGW (Telematics Gateway)	●	●	●	●
VSIM (Vehicle System Interface Module)	●	●	●	●
ADCM (Active Damping Control Module)	●	●	●	●
AFLS (Adaptive Front Lighting System)	●	●	●	●
DTCM (Drive Train Control Module)	●	●	●	●
ASCM (Air Suspension Control Module)	●	●	●	●
CTM (Central Telematics Module)	●	●	●	●
CSWM (Comfort Seat And Wheel Module)	●	●	●	●
EDM (External Disc Module)	●	●	●	●

PAM (Park Assist Module)	●	●	●	●
LBSS (Left Blind Spot Sensor)	●	●	●	●
RBSS (Right Blind Spot Sensor)	●	●	●	●
DCU (Dosing Control Unit)	●	●	●	●
ELSD (Electronic Limited Slip Differential)	●	●	●	●
EPB (Electric Parking Brake)	●	●	●	●
EPPM (Electronic Pedestrian Protection Module)	●	●	●	●
ESL (Electronic Steering Lock)	●	●	●	●
FFCM (Forward Facing Camera Module)	●	●	●	●
VGT (Variable Geometry Turbo)	●	●	●	●
VTM (Vehicle Tracking Module)	●	●	●	●
PTU (Power Transfer Unit)	●	●	●	●
RDM (Rear Drive Module)	●	●	●	●
BPCM (Battery Pack Control Module)	●	●	●	●
BTM (Battery Thermal Module)	●	●	●	●
DISP (Front Display)	●	●	●	●
DRM (Data Recorder Module)	●	●	●	●
EAC (Electric A/C Compressor)	●	●	●	●
EBG (Electronic Booster Gauge)	●	●	●	●
HCP (Hybrid Control Processor)	●	●	●	●
HGM (Hybrid Gateway Module)	●	●	●	●
ITBM (Integrated Trailer Brake Module)	●	●	●	●
MCPA (Motor Control Processor A)	●	●	●	●
MCPB (Motor Control Processor B)	●	●	●	●
MSM (Memory Seat/Memory Heated Seat)	●	●	●	●
OBCM (On Board Charging Module)	●	●	●	●
PHGM (Plug In Hybrid Gateway Module)	●	●	●	●
ABS0 (Anti Lock Brakes OBD)	●	●	●	●
AHCP (Auxiliary Hybrid Control Module)	●	●	●	●
AHM (Additional Heater Module)	●	●	●	●
ANC (Active Noise Cancelation)	●	●	●	●
APM (Adjustable Pedal Module)	●	●	●	●
CVPM (Central Vision Processing Module)	●	●	●	●
DSM (Display Screen Module)	●	●	●	●
DTV (Digital Television)	●	●	●	●
EAM (Emergency Assistance Module)	●	●	●	●
EBBM (Electronic Brake Booster Module)	●	●	●	●
EOMR (Electronic Overhead Module Rear)	●	●	●	●
ETM (Entertainment Telematic Module)	●	●	●	●
HALF (Haptical Lane Feedback)	●	●	●	●
HVACR (Rear Climate Control)	●	●	●	●
MSMP (Memory Seat Module-Passager)	●	●	●	●
RRM (Radio Receiver Module)	●	●	●	●
TTM (Trailer Tow Module)	●	●	●	●
VRM (Video Routing Module)	●	●	●	●
TBM (Telematic Box Module)	●	●	●	●
SRS (Supplemental Inflatable Restraint System)	●	●	●	●
HVAC/ATC	●	●	●	●
IPM/FCM (Intelligent Power Module)	●	●	●	●
MIC (Instrument Cluster)	●	●	●	●
MHS/APM (Memory Heated Seat/Adjustable Pedal Module)	●	●	●	●
DAA (Digital Audio Amplifier)	●	●	●	●

AT-XCM (Transfer Case Module)	●	●	●	●
NAV (NAVigation System)	●	●	●	●
RSM (Rain Sensor Module)	●	●	●	●
LSAB (Left Side Airbag)	●	●	●	●
RSAB (Right Side Airbag)	●	●	●	●
OHC (Overhead Console)	●	●	●	●
VTS (Vehicle Theft Security System)	●	●	●	●
SKM (SKIM-Skreem)	●	●	●	●
SAR (Satellite Audio Receiver)	●	●	●	●
SLA (Shift Level Assembly Module)	●	●	●	●
SRM (Airbag On/Off Switch System)	●	●	●	●