

Toyota **V10.21** Diagnostics List (Note:For reference only)

Connector	Module	Systems	Functions							
			Sys.Info	Read Dtc	Clear Dtc	Data stream	Actuation	FREEZE	Special functions	Others
16PIN DLC	POWERTRAIN	ENGINE AND ECT		✓	✓	✓				
16PIN DLC	POWERTRAIN	ENGINE		✓	✓	✓				
16PIN DLC	POWERTRAIN	ECT		✓	✓	✓				
16PIN DLC	POWERTRAIN	Cruise Control		✓	✓	✓				
16PIN DLC	POWERTRAIN	Engine(LH Bank)		✓	✓	✓				
16PIN DLC	POWERTRAIN	Engine(RH Bank)		✓	✓	✓				
16PIN DLC	POWERTRAIN	HV Battery		✓	✓	✓				
16PIN DLC	POWERTRAIN	Hybrid Control		✓	✓	✓				
16PIN DLC	POWERTRAIN	Sequential M/T		✓	✓	✓				

Toyota **V10.21** Diagnostics List (Note:For reference only)

Connector	Module	Systems	Functions							
			Sys.Info	Read Dtc	Clear Dtc	Data stream	Actuation	FREEZE	Special functions	Others
16PIN DLC	POWERTRAIN	Stop And Go		✓	✓	✓				
16PIN DLC	POWERTRAIN	Multi-Mode M/T		✓	✓	✓				
16PIN DLC	POWERTRAIN	Radar Cruise		✓	✓	✓				
16PIN DLC	POWERTRAIN	Laser Cruise		✓	✓	✓				
16PIN DLC	POWERTRAIN	E-ACM		✓	✓	✓				
16PIN DLC	POWERTRAIN	Motor Generator		✓	✓	✓				
16PIN DLC	POWERTRAIN	FC								
16PIN DLC	POWERTRAIN	FCHV								
16PIN DLC	POWERTRAIN	Idle HV		✓	✓	✓				
16PIN DLC	POWERTRAIN	Engine2		✓	✓	✓				

Toyota **V10.21** Diagnostics List (Note:For reference only)

Connector	Module	Systems	Functions							
			Sys.Info	Read Dtc	Clear Dtc	Data stream	Actuation	FREEZE	Special functions	Others
16PIN DLC	POWERTRAIN	ASG								
16PIN DLC	CHASSIS	ABS/VSC/TRC		√	√	√				
16PIN DLC	CHASSIS	AHC		√	√	√				
16PIN DLC	CHASSIS	AIR SUSPENSION		√	√	√				
16PIN DLC	CHASSIS	FREE TRONIC		√	√	√				
16PIN DLC	CHASSIS	EHPS		√	√	√				
16PIN DLC	CHASSIS	EMPS		√	√	√				
16PIN DLC	CHASSIS	EMS		√	√	√				
16PIN DLC	CHASSIS	KDSS		√	√	√				
16PIN DLC	CHASSIS	4WD		√	√	√				

Toyota **V10.21** Diagnostics List (Note:For reference only)

Connector	Module	Systems	Functions							
			Sys.Info	Read Dtc	Clear Dtc	Data stream	Actuation	FREEZE	Special functions	Others
16PIN DLC	CHASSIS	Lane Departure Alert								
16PIN DLC	CHASSIS	Tire Pressure Monitor		√	√	√				
16PIN DLC	CHASSIS	VGRS		√	√	√				
16PIN DLC	CHASSIS	Stabilizer		√	√	√				
16PIN DLC	CHASSIS	Intelligent Parking Assist		√	√	√				
16PIN DLC	CHASSIS	Electric Parking Brake		√	√	√				
16PIN DLC	CHASSIS	Lane Keeping Aisst		√	√	√				
16PIN DLC	CHASSIS	Front Stabilizer		√	√	√				
16PIN DLC	CHASSIS	Rear Stabilizer		√	√	√				
16PIN DLC	CHASSIS	ARS		√	√	√				

Toyota V10.21 Diagnostics List (Note:For reference only)

Connector	Module	Systems	Functions							
			Sys.Info	Read Dtc	Clear Dtc	Data stream	Actuation	FREEZE	Special functions	Others
16PIN DLC	CHASSIS	PPS		✓	✓	✓				
16PIN DLC	BODY	AFS		✓	✓	✓				
16PIN DLC	BODY	AIR CONDITIONER		✓	✓	✓				
16PIN DLC	BODY	BACK DOOR		✓	✓	✓				
16PIN DLC	BODY	BODY		✓	✓	✓				
16PIN DLC	BODY	BODY2		✓	✓	✓				
16PIN DLC	BODY	BODY NO3				✓				
16PIN DLC	BODY	BODY NO4		✓	✓	✓				
16PIN DLC	BODY	BODY NO5		✓	✓	✓				
16PIN DLC	BODY	CLEARANCE SONAR		✓	✓	✓				

Toyota V10.21 Diagnostics List (Note:For reference only)

Connector	Module	Systems	Functions							
			Sys.Info	Read Dtc	Clear Dtc	Data stream	Actuation	FREEZE	Special functions	Others
16PIN DLC	BODY	COMBI SW				√				
16PIN DLC	BODY	D-DOOR		√	√	√				
16PIN DLC	BODY	D-SEAT		√	√	√				
16PIN DLC	BODY	GATEWAY		√	√	√				
16PIN DLC	BODY	MIRROR				√				
16PIN DLC	BODY	MIRROR-L				√				
16PIN DLC	BODY	MIRROR-R				√				
16PIN DLC	BODY	OCCUPANT DETECT		√	√	√				
16PIN DLC	BODY	P-DOOR		√	√	√				
16PIN DLC	BODY	P-SEAT		√	√	√				

Toyota V10.21 Diagnostics List (Note:For reference only)

Connector	Module	Systems	Functions							
			Sys.Info	Read Dtc	Clear Dtc	Data stream	Actuation	FREEZE	Special functions	Others
16PIN DLC	BODY	PWR SOURCE CTRL		✓	✓	✓				
16PIN DLC	BODY	RAIN SENSOR		✓	✓	✓				
16PIN DLC	BODY	REAR-SEAT SW				✓				
16PIN DLC	BODY	RL-DOOR MOTOR		✓	✓	✓				
16PIN DLC	BODY	RL-SEAT				✓				
16PIN DLC	BODY	RR-DOOR MOTOR		✓	✓	✓				
16PIN DLC	BODY	RR-SEAT				✓				
16PIN DLC	BODY	SLIDE ROOF		✓	✓	✓				
16PIN DLC	BODY	SRS AIRBAG		✓	✓	✓				
16PIN DLC	BODY	STEERING PAD SWITCH				✓				

Toyota **V10.21** Diagnostics List (Note:For reference only)

Connector	Module	Systems	Functions							
			Sys.Info	Read Dtc	Clear Dtc	Data stream	Actuation	FREEZE	Special functions	Others
16PIN DLC	BODY	TILT&TELESCO		✓	✓	✓				
16PIN DLC	BODY	WIPER				✓				
16PIN DLC	BODY	Main Body		✓	✓	✓				
16PIN DLC	BODY	Tvss		✓	✓	✓				
16PIN DLC	BODY	Entry&Start		✓	✓	✓				
16PIN DLC	BODY	Master Switch		✓	✓	✓				
16PIN DLC	BODY	HV Gateway		✓	✓	✓				
16PIN DLC	BODY	Night View		✓	✓	✓				
16PIN DLC	BODY	HL AutoLeveling		✓	✓	✓				
16PIN DLC	BODY	Gateway BEAN		✓	✓					

Toyota **V10.21** Diagnostics List (Note:For reference only)

Connector	Module	Systems	Functions								
			Sys.Info	Read Dtc	Clear Dtc	Data stream	Actuation	FREEZE	Special functions	Others	
16PIN DLC	BODY	Accessory Gateway		✓	✓	✓					
16PIN DLC	BODY	Front Left Seat A/C		✓		✓					
16PIN DLC	BODY	Front Right Seat A/C		✓		✓					
16PIN DLC	BODY	Gateway CAN		✓	✓						
16PIN DLC	BODY	ECM Gateway		✓	✓	✓					
16PIN DLC	BODY	ECB Gateway		✓	✓	✓					
16PIN DLC	BODY	WIL Gateway		✓	✓	✓					
16PIN DLC	BODY	Center Console Switch			✓	✓					
16PIN DLC	BODY	Rear Console Switch		✓	✓	✓					
16PIN DLC	BODY	Rear Left Seat A/C		✓		✓					

Toyota **V10.21** Diagnostics List (Note:For reference only)

Connector	Module	Systems	Functions								
			Sys.Info	Read Dtc	Clear Dtc	Data stream	Actuation	FREEZE	Special functions	Others	
16PIN DLC	BODY	Rear Right Seat A/C		✓		✓					
16PIN DLC	BODY	Electric Power Control		✓	✓	✓					
16PIN DLC	BODY	Active Headrest R		✓	✓	✓					
16PIN DLC	BODY	Active Headrest L		✓	✓	✓					
16PIN DLC	BODY	Combination Meter		✓	✓	✓					
16PIN DLC	BODY	Theft Deterrent		✓	✓	✓					
16PIN DLC	BODY	Pre-Crash		✓	✓	✓					
16PIN DLC	BODY	Pre-Crash 2		✓	✓	✓					
16PIN DLC	BODY	PM1 Gateway		✓	✓	✓					
16PIN DLC	BODY	PM2 Gateway		✓	✓	✓					

Toyota **V10.21** Diagnostics List (Note:For reference only)

Connector	Module	Systems	Functions							
			Sys.Info	Read Dtc	Clear Dtc	Data stream	Actuation	FREEZE	Special functions	Others
16PIN DLC	BODY	Charging Control		✓	✓	✓				
16PIN DLC	BODY	Night		✓	✓	✓				
16PIN DLC	BODY	Romote Security		✓	✓	✓				
16PIN DLC	BODY	CAN bus Gateway		✓	✓	✓				
16PIN DLC	BODY	Remote Generator Start				✓				
16PIN DLC	BODY	Powertrain Gateway2		✓	✓	✓				
16PIN DLC	BODY	Pedal			✓	✓				
16PIN DLC	BODY	Radar Cruise		✓	✓	✓				
16PIN DLC	BODY	Front Left Door		✓	✓	✓				
16PIN DLC	BODY	Front Right Door		✓	✓	✓				

Toyota **V10.21** Diagnostics List (Note:For reference only)

Connector	Module	Systems	Functions							
			Sys.Info	Read Dtc	Clear Dtc	Data stream	Actuation	FREEZE	Special functions	Others
16PIN DLC	BODY	Telematic		✓	✓	✓				
16PIN DLC	BODY	P Master Switch		✓	✓	✓				
16PIN DLC	BODY	Blind Spot Monitor R		✓	✓	✓				
16PIN DLC	BODY	Blind Spot Monitor L		✓	✓	✓				
16PIN DLC	BODY	Active Rear Wing								
16PIN DLC	BODY	Transmission Control		✓	✓	✓				
16PIN DLC	BODY	Multi Bus Gateway		✓	✓	✓				
16PIN DLC	BODY	Multi Bus Monitor No.1		✓	✓	✓				
16PIN DLC	BODY	Multi Bus Monitor No.2		✓	✓	✓				
16PIN DLC	BODY	Gateway V		✓	✓	✓				

Toyota **V10.21** Diagnostics List (Note:For reference only)

Connector	Module	Systems	Functions							
			Sys.Info	Read Dtc	Clear Dtc	Data stream	Actuation	FREEZE	Special functions	Others
16PIN DLC	ANTI THEFT	IMMOBILISER		✓	✓	✓				
16PIN DLC	ANTI THEFT	steering lock		✓	✓	✓				
17PIN TOYOTA- 17 DLC	ENGINE			✓	✓	✓				
17PIN TOYOTA- 17 DLC	SRA AIR BAG			✓	✓					
17PIN TOYOTA- 17 DLC	ECT			✓	✓					
17PIN TOYOTA- 17 DLC	ABS			✓	✓					
17PIN TOYOTA- 17 DLC	CCS			✓	✓					
17PIN TOYOTA- 17 DLC	AIR SUSPENSION			✓	✓					
17PIN TOYOTA- 17F or 22PIN DLC	ENGINE			✓	✓	✓				

Toyota **V10.21** Diagnostics List (Note:For reference only)

Connector	Module	Systems	Functions								
			Sys.Info	Read Dtc	Clear Dtc	Data stream	Actuation	FREEZE	Special functions	Others	
17PIN TOYOTA- 17F or 22PIN DLC	SRA AIRBAG			√	√						
17PIN TOYOTA- 17F or 22PIN DLC	ABS(available for TOYOTA-22)			√	√						