CHRYSLER_V11.10 Diag Function List(Note:For reference only)

NOTES:

- This function is supported.
- imes This function may be supported, which depends on the actual condition of the vehicle.
- O This function is not supported.
- lacktriangle This function is the new feature in this version.

Make	Year	Model
CHRYSLER	2017	200
CHRYSLER	2017	300
CHRYSLER	2017	Pacifica
CHRYSLER	2017	Town&Country
CHRYSLER	2016	200
CHRYSLER	2016	300
CHRYSLER	2016	Town&Country
CHRYSLER	2015	200
CHRYSLER	2015	300
CHRYSLER	2015	Town&Country
CHRYSLER	2014	200
CHRYSLER	2014	300
CHRYSLER	2014	Sebring
CHRYSLER	2014	Town&Country
CHRYSLER	2013	200
CHRYSLER	2013	300
CHRYSLER	2013	Sebring
CHRYSLER	2013	Town&Country
CHRYSLER	2012	200
CHRYSLER	2012	300
CHRYSLER	2012	Sebring
CHRYSLER	2012	Town&Country
CHRYSLER	2011	200
CHRYSLER	2011	300
CHRYSLER	2011	Sebring
CHRYSLER	2011	Town&Country
CHRYSLER	2010	200
CHRYSLER	2010	300
CHRYSLER	2010	PT Cruiser
CHRYSLER	2010	Sebring
CHRYSLER	2010	Town&Country
CHRYSLER	2009	200
CHRYSLER	2009	300
CHRYSLER	2009	Aspen
CHRYSLER	2009	PT Cruiser
CHRYSLER	2009	Sebring
CHRYSLER	2009	Town&Country
CHRYSLER	2008	200
CHRYSLER	2008	300
CHRYSLER	2008	Aspen
CHRYSLER	2008	Pacifica
CHRYSLER	2008	PT Cruiser
CHRYSLER	2008	Sebring
CHRYSLER	2008	Town&Country
CHRYSLER	2007	200

CHRYSLER	2007	300			
CHRYSLER	2007	Aspen			
CHRYSLER	2007	Grand Voyager			
CHRYSLER	2007	Pacifica			
CHRYSLER	2007	PT Cruiser			
CHRYSLER	2007	Sebring Sebring			
CHRYSLER	2007	Town&Country			
CHRYSLER	2006	300			
CHRYSLER	2006	Grand Voyager			
CHRYSLER	2006	Pacifica			
CHRYSLER	2006	PT Cruiser			
CHRYSLER	2006	Sebring			
CHRYSLER	2006	Town&Country			
CHRYSLER	2005	300			
CHRYSLER	2005	Grand Voyager			
CHRYSLER	2005	Pacifica			
CHRYSLER	2005	PT Cruiser			
CHRYSLER	2005	PT Cruiser Sebring			
CHRYSLER	2005	Town&Country			
CHRYSLER	2004	300M			
CHRYSLER	2004	Concorde			
CHRYSLER	2004	Grand Voyager			
CHRYSLER	2004	Intrepid			
CHRYSLER	2004	Pacifica			
CHRYSLER	2004	PT Cruiser			
CHRYSLER	2004	Sebring			
CHRYSLER	2004	Town&Country			
		Before 2004			
CHRYSLER	Before 2004	1			
CHRYSLER System	Before 2004 ECU INFO.	1	Clear Code	View Data	
		Before 2004	Clear Code	View Data	
System	ECU INFO.	Before 2004 Read Code	_	_	
System PCM (Power Control Module)	ECU INFO.	Before 2004 Read Code	•	•	
System PCM (Power Control Module) PCM (Powertrain Control Module) (Type 1)	ECU INFO.	Before 2004 Read Code	•	•	
System PCM (Power Control Module) PCM (Powertrain Control Module) (Type 1) PCM (Powertrain Control Module) (Type 2)	ECU INFO.	Before 2004 Read Code	•	•	
System PCM (Power Control Module) PCM (Powertrain Control Module) (Type 1) PCM (Powertrain Control Module) (Type 2) RADIO	ECU INFO.	Before 2004 Read Code	•	•	
System PCM (Power Control Module) PCM (Powertrain Control Module) (Type 1) PCM (Powertrain Control Module) (Type 2) RADIO TCM (Transmission Control Module) (Type 1)	ECU INFO.	Before 2004 Read Code	•	•	
System PCM (Power Control Module) PCM (Powertrain Control Module) (Type 1) PCM (Powertrain Control Module) (Type 2) RADIO TCM (Transmission Control Module) (Type 1) TCM (Transmission Control Module) (Type 2)	ECU INFO.	Before 2004 Read Code	•	•	
PCM (Power Control Module) PCM (Powertrain Control Module) (Type 1) PCM (Powertrain Control Module) (Type 2) RADIO TCM (Transmission Control Module) (Type 1) TCM (Transmission Control Module) (Type 2) TCM (Transmission Control Module) (Type 2)	ECU INFO.	Before 2004 Read Code	•	•	
PCM (Power Control Module) PCM (Powertrain Control Module) (Type 1) PCM (Powertrain Control Module) (Type 2) RADIO TCM (Transmission Control Module) (Type 1) TCM (Transmission Control Module) (Type 2) TCM (Transmission Control Module) (Type 2) ABS (Antilock Brake Controller)	ECU INFO.	Before 2004 Read Code	•	•	
PCM (Power Control Module) PCM (Powertrain Control Module) (Type 1) PCM (Powertrain Control Module) (Type 2) RADIO TCM (Transmission Control Module) (Type 1) TCM (Transmission Control Module) (Type 2) TCM (Transmission Control Module) ABS (Antilock Brake Controller) ORC/SRS (Occupant Restraint Controller)	ECU INFO.	Before 2004 Read Code	•	•	
PCM (Power Control Module) PCM (Powertrain Control Module) (Type 1) PCM (Powertrain Control Module) (Type 2) RADIO TCM (Transmission Control Module) (Type 1) TCM (Transmission Control Module) (Type 2) TCM (Transmission Control Module) ABS (Antilock Brake Controller) ORC/SRS (Occupant Restraint Controller) BCM (Body Computer Module)	ECU INFO.	Before 2004 Read Code	•	•	
PCM (Power Control Module) PCM (Powertrain Control Module) (Type 1) PCM (Powertrain Control Module) (Type 2) RADIO TCM (Transmission Control Module) (Type 1) TCM (Transmission Control Module) (Type 2) TCM (Transmission Control Module) (Type 2) TCM (Transmission Control Module) ABS (Antilock Brake Controller) ORC/SRS (Occupant Restraint Controller) BCM (Body Computer Module) CCN/INSTR (Cabin Compartment Node/Instrument Cluster)	ECU INFO.	Before 2004 Read Code	•	•	
PCM (Power Control Module) PCM (Powertrain Control Module) (Type 1) PCM (Powertrain Control Module) (Type 2) RADIO TCM (Transmission Control Module) (Type 1) TCM (Transmission Control Module) (Type 2) TCM (Transmission Control Module) (Type 2) TCM (Transmission Control Module) ABS (Antilock Brake Controller) ORC/SRS (Occupant Restraint Controller) BCM (Body Computer Module) CCN/INSTR (Cabin Compartment Node/Instrument Cluster) WCM (Wireless Control Module)	ECU INFO.	Before 2004 Read Code	•	•	
PCM (Power Control Module) PCM (Powertrain Control Module) (Type 1) PCM (Powertrain Control Module) (Type 2) RADIO TCM (Transmission Control Module) (Type 1) TCM (Transmission Control Module) (Type 2) TCM (Transmission Control Module) (Type 2) TCM (Transmission Control Module) ABS (Antilock Brake Controller) ORC/SRS (Occupant Restraint Controller) BCM (Body Computer Module) CCN/INSTR (Cabin Compartment Node/Instrument Cluster) WCM (Wireless Control Module) HVAC (Heat Ventilation And A/C)	ECU INFO.	Before 2004 Read Code	•	•	
PCM (Power Control Module) PCM (Powertrain Control Module) (Type 1) PCM (Powertrain Control Module) (Type 2) RADIO TCM (Transmission Control Module) (Type 1) TCM (Transmission Control Module) (Type 2) TCM (Transmission Control Module) (Type 2) TCM (Transmission Control Module) ABS (Antilock Brake Controller) ORC/SRS (Occupant Restraint Controller) BCM (Body Computer Module) CCN/INSTR (Cabin Compartment Node/Instrument Cluster) WCM (Wireless Control Module) HVAC (Heat Ventilation And A/C) OCM (Occupant Classification Module)	ECU INFO.	Before 2004 Read Code	•	•	
PCM (Power Control Module) PCM (Powertrain Control Module) (Type 1) PCM (Powertrain Control Module) (Type 2) RADIO TCM (Transmission Control Module) (Type 1) TCM (Transmission Control Module) (Type 2) TCM (Transmission Control Module) (Type 2) TCM (Transmission Control Module) ABS (Antilock Brake Controller) ORC/SRS (Occupant Restraint Controller) BCM (Body Computer Module) CCN/INSTR (Cabin Compartment Node/Instrument Cluster) WCM (Wireless Control Module) HVAC (Heat Ventilation And A/C) OCM (Occupant Classification Module) DDM (Drivers Door Module)	ECU INFO.	Before 2004 Read Code	•	•	
PCM (Power Control Module) PCM (Powertrain Control Module) (Type 1) PCM (Powertrain Control Module) (Type 2) RADIO TCM (Transmission Control Module) (Type 1) TCM (Transmission Control Module) (Type 2) TCM (Transmission Control Module) (Type 2) TCM (Transmission Control Module) ABS (Antilock Brake Controller) ORC/SRS (Occupant Restraint Controller) BCM (Body Computer Module) CCN/INSTR (Cabin Compartment Node/Instrument Cluster) WCM (Wireless Control Module) HVAC (Heat Ventilation And A/C) OCM (Occupant Classification Module) DDM (Drivers Door Module) PDM (Passengers Door Module)	ECU INFO.	Before 2004 Read Code	•	•	
PCM (Power Control Module) PCM (Powertrain Control Module) (Type 1) PCM (Powertrain Control Module) (Type 2) RADIO TCM (Transmission Control Module) (Type 1) TCM (Transmission Control Module) (Type 2) TCM (Transmission Control Module) ABS (Antilock Brake Controller) ORC/SRS (Occupant Restraint Controller) BCM (Body Computer Module) CCN/INSTR (Cabin Compartment Node/Instrument Cluster) WCM (Wireless Control Module) HVAC (Heat Ventilation And A/C) OCM (Occupant Classification Module) DDM (Drivers Door Module) PDM (Passengers Door Module) PTS (Park Tronics)	ECU INFO.	Before 2004 Read Code	•	•	
PCM (Power Control Module) PCM (Powertrain Control Module) (Type 1) PCM (Powertrain Control Module) (Type 2) RADIO TCM (Transmission Control Module) (Type 1) TCM (Transmission Control Module) (Type 2) TCM (Transmission Control Module) ABS (Antilock Brake Controller) ORC/SRS (Occupant Restraint Controller) BCM (Body Computer Module) CCN/INSTR (Cabin Compartment Node/Instrument Cluster) WCM (Wireless Control Module) HVAC (Heat Ventilation And A/C) OCM (Occupant Classification Module) DDM (Drivers Door Module) PDM (Passengers Door Module) PTS (Park Tronics) AMP (Amplifier)	ECU INFO.	Before 2004 Read Code		•	
PCM (Power Control Module) PCM (Powertrain Control Module) (Type 1) PCM (Powertrain Control Module) (Type 2) RADIO TCM (Transmission Control Module) (Type 1) TCM (Transmission Control Module) (Type 2) TCM (Transmission Control Module) ABS (Antilock Brake Controller) ORC/SRS (Occupant Restraint Controller) BCM (Body Computer Module) CCN/INSTR (Cabin Compartment Node/Instrument Cluster) WCM (Wireless Control Module) HVAC (Heat Ventilation And A/C) OCM (Occupant Classification Module) DDM (Drivers Door Module) PDM (Passengers Door Module) PTS (Park Tronics) AMP (Amplifier) ACC (Adaptive Cruise Control)	ECU INFO.	Before 2004 Read Code		•	
PCM (Power Control Module) PCM (Powertrain Control Module) (Type 1) PCM (Powertrain Control Module) (Type 2) RADIO TCM (Transmission Control Module) (Type 1) TCM (Transmission Control Module) (Type 2) TCM (Transmission Control Module) ABS (Antilock Brake Controller) ORC/SRS (Occupant Restraint Controller) BCM (Body Computer Module) CCN/INSTR (Cabin Compartment Node/Instrument Cluster) WCM (Wireless Control Module) HVAC (Heat Ventilation And A/C) OCM (Occupant Classification Module) DDM (Drivers Door Module) PDM (Passengers Door Module) PTS (Park Tronics) AMP (Amplifier) ACC (Adaptive Cruise Control) AHBM (Automatic High Beam Module)	ECU INFO.	Before 2004 Read Code		•	
PCM (Power Control Module) PCM (Powertrain Control Module) (Type 1) PCM (Powertrain Control Module) (Type 2) RADIO TCM (Transmission Control Module) (Type 1) TCM (Transmission Control Module) (Type 2) TCM (Transmission Control Module) ABS (Antilock Brake Controller) ORC/SRS (Occupant Restraint Controller) BCM (Body Computer Module) CCN/INSTR (Cabin Compartment Node/Instrument Cluster) WCM (Wireless Control Module) HVAC (Heat Ventilation And A/C) OCM (Occupant Classification Module) DDM (Drivers Door Module) PDM (Passengers Door Module) PTS (Park Tronics) AMP (Amplifier) ACC (Adaptive Cruise Control) AHBM (Automatic High Beam Module) DMFR (Door Module Front Right)	ECU INFO.	Before 2004 Read Code		•	
PCM (Power Control Module) PCM (Powertrain Control Module) (Type 1) PCM (Powertrain Control Module) (Type 2) RADIO TCM (Transmission Control Module) (Type 1) TCM (Transmission Control Module) (Type 2) TCM (Transmission Control Module) ABS (Antilock Brake Controller) ORC/SRS (Occupant Restraint Controller) BCM (Body Computer Module) CCN/INSTR (Cabin Compartment Node/Instrument Cluster) WCM (Wireless Control Module) HVAC (Heat Ventilation And A/C) OCM (Occupant Classification Module) DDM (Drivers Door Module) PDM (Passengers Door Module) PTS (Park Tronics) AMP (Amplifier) ACC (Adaptive Cruise Control) AHBM (Automatic High Beam Module) DMRR (Door Module Rear Right)	ECU INFO.	Before 2004 Read Code		•	

				ı —
EOM (Electronic Overhead Module)	•	•	•	•
HFM (Hands Free Module)	•	•	•	•
AHLM (Auto Headlamp Leveling Module)	•	•	•	•
ASBS (Automatic Sway Bar System)	•	•	•	•
AWD (All Wheel Drive)	•	•	•	•
DMFL (Left Forward Door Module)	•	•	•	•
DMRL (Left Rear Door Module)	•	•	•	•
FSM (Folding Seat Module)	•	•	•	•
HIDT (High Intensity Discharge Translator)	•	•	•	•
HSM (Heated Seat Module)	•	•	•	•
SAS (Steering Angle Sensor)	•	•	•	•
ITM (Intrusion Module)	•	•	•	•
LRSM (Light Rain Sensor Module)	•	•	•	•
PLGM (Power Lift Gate Module)	•	•	•	•
PSDML (Power Sliding Door Module (Left))	•	•	•	•
PSDMR (Power Sliding Door Module (Right))	•	•	•	•
PTIM (Police/Taxi Interface Module)	•	•	•	•
SDAR (Satellite Digital Radio)	•	•	•	•
SDARV (Satellite Video Receiver)	•	•	•	•
VES (Vehicle Entertainment System)	•	•	•	•
TM (Trailer)	•	•	•	•
MSMD (Memory Seat Module)	•	•	•	•
SUNR (Sunroof Module)	•	•	•	•
SCM (Steering Column Module)	•	•	•	•
VES3 (Last Row Srceem)	•	•	•	•
TPMS (Tire Pressure Monitoring Systems)	•	•	•	•
PTCM (Power Top Control Module)	•	•	•	•
PEM (Passive Entry Module)	•	•	•	•
VES2 (Second Row Screen)	•	•	•	•
SCCM (Steering Column Control Module)	•	•	•	•
IPC (Instrument Panel Cluster)	•	•	•	•
RFH (Radio Frequency Hub)	•	•	•	•
EPS (Electric Power Steering)	•	•	•	•
ICS (Integrated Center Stack)	•	•	•	•
BSM (Blind Spot Module)	•	•	•	•
TGW (Telematics Gateway)	•	•	•	•
VSIM (Vehicle System Interface Module)	•	•	•	•
ADCM (Active Damping Control Module)	•	•	•	•
AFLS (Adaptive Front Lighting System)	•	•	•	•
DTCM (Drive Train Control Module)	•	•	•	•
ASCM (Air Suspension Control Module)	•	•	•	•
CTM (Central Telematics Module)	•	•	•	•
CSWM (Comfort Seat And Wheel Module)	•	•	•	•
EDM (External Disc Module)	•	•	•	•
PAM (Park Assist Module)	•	•	•	•
LBSS (Left Blind Spot Sensor)	•	•	•	•
RBSS (Right Blind Spot Sensor)	•	•	•	•
DCU (Dosing Control Unit)	•	•	•	•
ELSD (Electronic Limited Slip Differential)	•	•	•	•
EPB (Electric Parking Brake)	•	•	•	•
EPPM (Electronic Pedestrian Protection Module)	•	•	•	•
ESL (Electronic Steering Lock)	•	•	•	•
FFCM (Forward Facing Camera Module)	•	•	•	•
VGT (Variable Geometry Turbo)	•	•		
.or (.arrable deciment) lumbo/				

VTM (Vehicle Tracking Module)	•	•	•	
PTU (Power Transfer Unit)		•	•	•
RDM (Rear Drive Module)	•	•	•	•
BPCM (Battery Pack Control Module)	•	•	•	•
BTM (Battery Thermal Module)		•	•	•
DISP (Front Display)		•	•	•
DRM (Data Recorder Module)	•	•	•	•
EAC (Electric A/C Compressor)		•	•	•
EBG (Electronic Booster Gauge)		•	•	•
HCP (Hybrid Control Processor)		•		•
HGM (Hybrid Gateway Module)		•	•	•
ITBM (Integrated Trailer Brake Module)			•	
MCPA (Motor Control Processor A)		•		
MCPB (Motor Control Processor B)		•	•	
MSM (Memory Seat/Memory Heated Seat)				_
OBCM (On Board Charging Module)				_
PHGM (Plug In Hybrid Gateway Module) ABSO (Anti Lock Brakes OBD)				
,			_	_
AHCP (Auxiliary Hybrid Control Module)		_	_	_
AHM (Additional Heater Module)		_	_	
ANC (Active Noise Cancelation)		•	_	_
APM (Adjustable Pedal Module)	•	•	•	•
CVPM (Central Vision Processing Module)		•	•	•
DSM (Display Screen Module)		•	•	•
DTV (Digital Television)		•	•	•
EAM (Emergency Assistance Module)		•	•	•
EBBM (Electronic Brake Booster Module)	•	•	•	•
EOMR (Electronic Overhead Module Rear)		•	•	•
ETM (Entertainment Telematic Module)		•	•	•
HALF (Haptical Lane Feedback)	•	•	•	•
HVACR (Rear Climate Control)	•	•	•	•
MSMP (Memory Seat Module-Passager)	•	•	•	•
RRM (Radio Receiver Module)	•	•	•	•
TTM (Trailer Tow Module)	•	•	•	•
VRM (Video Routing Module)	•	•	•	•
TBM (Telematic Box Module)	•	•	•	•
SRS (Supplemental Inflatable Restraint System)		•	•	•
HVAC/ATC	•	•	•	•
IPM/FCM (Intelligent Power Module)	•	•	•	•
MIC (Instrument Cluster)	•	•	•	•
MHS/APM (Memory Heated Seat/Adjustable Pedal Module)	<u> </u>	•	•	•
DAA (Digital Audio Amplifier)		-	-	_
AT-XCM (Transfer Case Module)	• -	-	_	-
NAV (NAVigation System)	•	•	•	•
RSM (Rain Sensor Module)	• -	-	_	-
LSAB (Left Side Airbag)	•	•	•	•
RSAB (Right Side Airbag)	• -	-	_	-
OHC (Overhead Console)	• -	-	•	-
VTS (Vehicle Theft Security System)	•	•	•	•
SKM (SKIM-Skreem)	•	•	•	•
SAR (Satellite Audio Receiver)	•	•	•	•
SLA (Shift Level Assembly Module)	•	•	•	•
SRM (Airbag On/Off Switch System)	•	•	•	•