

# UD V12.0

1. X : means the function is supported.

2. \* : means the function is added or developed newly in the new version

VEHICLE INFORMATION				FUNCTION					
Year	Type	Model	System	ECU INFO	DTC	DTC Freeze	Data List	Actuations	Spec. Func.
2004 and Earlier	Light Duty	UD 1200 FD46TA	Automatic Transmission Engine(ECU)		X		X		
2004 and Earlier	Light Duty	UD 1200 FD46TA	Automatic Transmission ABS(BCU)		X		X	X	
2004 and Earlier	Light Duty	UD 1200 FD46TA	Manual Transmission Engine(ECU)		X		X		
2004 and Earlier	Light Duty	UD 1200 FD46TA	Manual Transmission ABS(BCU)		X		X	X	
2004 and Earlier	Light Duty	UD 1400 FD46TA	Automatic Transmission Engine(ECU)		X		X		
2004 and Earlier	Light Duty	UD 1400 FD46TA	Automatic Transmission ABS(BCU)		X		X	X	
2004 and Earlier	Light Duty	UD 1400 FD46TA	Manual Transmission Engine(ECU)		X		X		
2004 and Earlier	Light Duty	UD 1400 FD46TA	Manual Transmission ABS(BCU)		X		X	X	
2004 and Earlier	Light Duty	UD 1800CS FD46TA	Automatic Transmission Engine(ECU)		X		X		
2004 and Earlier	Light Duty	UD 1800CS FD46TA	Automatic Transmission ABS(BCU)		X		X	X	
2004 and Earlier	Light Duty	UD 1800CS FD46TA	Manual Transmission Engine(ECU)		X		X		
2004 and Earlier	Light Duty	UD 1800CS FD46TA	Manual Transmission ABS(BCU)		X		X	X	
2004 and Earlier	Light Duty	P11C/J08E Series	Automatic Transmission Engine(ECU)	X	X		X	X	Read and Write Injector code Cruise Set Change Speed Limit Setting Change EGR Check DPR Manual Forced Regeneration Reset All DPR Items
2004 and Earlier	Medium Duty	UD 1800 FD46TA	Automatic Transmission ABS(BCU)		X		X		
2004 and Earlier	Medium Duty	UD 1800 FD46TA	Manual Transmission Engine(ECU)		X		X	X	
2004 and Earlier	Medium Duty	UD 2000 FD46TA	Manual Transmission ABS(BCU)		X		X		
2004 and Earlier	Medium Duty	UD 2000 FD46TA	Automatic Transmission Engine(ECU)		X		X	X	
2004 and Earlier	Medium Duty	UD 2300 FD46TA	Automatic Transmission ABS(BCU)		X		X		
2004 and Earlier	Medium Duty	UD 2300 FD46TA	Manual Transmission Engine(ECU)		X		X	X	
2004 and Earlier	Medium Duty	UD 2600 FD46TA	Manual Transmission ABS(BCU)		X		X		

Year	Type	Model	System	ECU INFO	DTC	DTC Freeze	Data List	Actuations	Spec. Func.
2004 and Earlier	Medium Duty	UD 2600 FD46TA	Automatic Transmission Engine(ECU)		X		X	X	
2004 and Earlier	Medium Duty	UD 3300 FD46TA	Automatic Transmission ABS(BCU)		X		X		
2004 and Earlier	Medium Duty	UD 3300 FD46TA	Manual Transmission Engine(ECU)		X		X	X	
2004 and Earlier	Medium Duty	P11C/J08E Series	Manual Transmission ABS(BCU)	X	X		X	X	Read and Write Injector code Cruise Set Change Speed Limit Setting Change EGR Check DPR Manual Forced Regeneration Reset All DPR Items
2004 and Earlier	Heavy Duty	P11C/J08E Series	Engine(ECU)	X	X		X	X	Read and Write Injector code Cruise Set Change Speed Limit Setting Change EGR Check DPR Manual Forced Regeneration Reset All DPR Items
2005 and Later	Light Duty	UD 1300 J05D-TA	Automatic Transmission Engine(ECU)	X	X		X		
2005 and Later	Light Duty	UD 1300 J05D-TA	Automatic Transmission ABS(BCU)		X		X	X	
2005 and Later	Light Duty	UD 1300 J05D-TA	Manual Transmission Engine(ECU)	X	X		X		
2005 and Later	Light Duty	UD 1300 J05D-TA	Manual Transmission ABS(BCU)		X		X	X	
2005 and Later	Light Duty	UD 1400 J05D-TA	Automatic Transmission Engine(ECU)	X	X		X		
2005 and Later	Light Duty	UD 1400 J05D-TA	Automatic Transmission ABS(BCU)		X		X	X	
2005 and Later	Light Duty	UD 1400 J05D-TA	Manual Transmission Engine(ECU)	X	X		X		
2005 and Later	Light Duty	UD 1400 J05D-TA	Manual Transmission ABS(BCU)		X		X	X	
2005 and Later	Light Duty	UD 1800CS J05D-TA	Automatic Transmission Engine(ECU)	X	X		X		
2005 and Later	Light Duty	UD 1800CS J05D-TA	Automatic Transmission ABS(BCU)		X		X	X	
2005 and Later	Light Duty	UD 1800CS J05D-TA	Manual Transmission Engine(ECU)	X	X		X		
2005 and Later	Light Duty	UD 1800CS J05D-TA	Manual Transmission ABS(BCU)		X		X	X	
2005 and Later	Light Duty	P11C/J08E Series	Engine(ECU)	X	X		X	X	Read and Write Injector code Cruise Set Change Speed Limit Setting Change EGR Check DPR Manual Forced Regeneration Reset All DPR Items
2005 and Later	Medium Duty	UD 1800 J08E	Engine(ECU)	X	X		X		

Year	Type	Model	System	ECU INFO	DTC	DTC Freeze	Data List	Actuations	Spec. Func.
2005 and Later	Medium Duty	UD 1800 J08E	ABS(BCU)		X		X	X	
2005 and Later	Medium Duty	UD 2000 J08E	Engine(ECU)	X	X		X		
2005 and Later	Medium Duty	UD 2000 J08E	ABS(BCU)		X		X	X	
2005 and Later	Medium Duty	UD 2300 J08E	Engine(ECU)	X	X		X		
2005 and Later	Medium Duty	UD 2300 J08E	ABS(BCU)		X		X	X	
2005 and Later	Medium Duty	UD 2600 J08E	Engine(ECU)	X	X		X		
2005 and Later	Medium Duty	UD 2600 J08E	ABS(BCU)		X		X	X	
2005 and Later	Medium Duty	UD 3300 J08E	Engine(ECU)	X	X		X		
2005 and Later	Medium Duty	UD 3300 J08E	ABS(BCU)		X		X	X	
2005 and Later	Medium Duty	P11C/J08E Series	Engine(ECU)	X	X		X	X	Read and Write Injector code Cruise Set Change Speed Limit Setting Change EGR Check DPR Manual Forced Regeneration Reset All DPR Items
2005 and Later	Heavy Duty	UD G105R/G107R Series	Engine(ECU)		X		X		
2005 and Later	Heavy Duty	P11C/J08E Series	Engine(ECU)	X	X		X	X	Read and Write Injector code Cruise Set Change Speed Limit Setting Change EGR Check DPR Manual Forced Regeneration Reset All DPR Items
2005 and Later	Heavy Duty	Other	Engine(EURO5)		X		X		